

MLX16DP


Pressing **LINE** followed by a digit (1-7) on the Wireless Telephone is equivalent to pressing one of the line keys on the MLX16DP.

FCN followed by a digit (1-9) on the Wireless Telephone is equivalent to using feature buttons on the station set.

FCN followed by * and a digit (1-8) allows you to access the eight programmable soft keys under the station set display.

Function Key Strokes	Default Settings	Fill In Your Feature Settings
FCN + 1	MUTE	
FCN + 2	XFER	
FCN + 3	CONF	
FCN + 4	LND	
FCN + 5	FWD	
FCN + 6	PAGE	
FCN + 7	PICK	
FCN + 8	CALLBK	
FCN + 9	EXIT MENUS	
FCN * 1		
FCN * 2		
FCN * 3		
FCN * 4		
FCN * 5		
FCN * 6		
FCN * 7		
FCN * 8		
LINE + 0	DROP	

Wireless Telephone Quick Reference Guide Avaya MERLIN LEGEND/MAGIX PBX

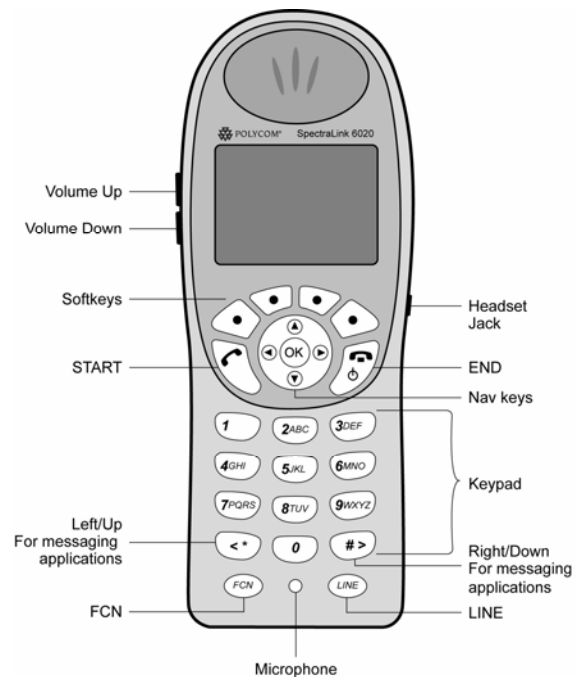

SpectraLink 6020 Wireless Telephone

On/Off Press and hold **END**. Two chirps on, one chirp off

Make a call Press **START** to get dial tone.

Hang up Press **END**. Be sure to do this at the end of each call.

Answer call Press **START**. Line indicator comes on steady when the call is answered.

Answer second call Press **HOLD** to put your current call on hold, or **END** to hang up. Press **LINE** + the digit that is flashing.

Hold Press **HOLD**

Take off Hold Press **LINE** followed by the digit for the line on hold, which will be flashing.

Mute On/Off Press the **MUTE** softkey.

Function Pressing **FCN** while off hook allows you to scroll through menu screens.

User Options Press the **CFG** softkey while on hook to change handset settings.

For information on Battery Pack charging and setting user preferences, see the Wireless Telephone User Guide.

